



 = TERRA, GROUND, TERRE, ERDMASSE, TIERRA, AARDKLEM

N = COMUNE, COMMON, COMUNE, GEMEIN, COMÚN, GEMEEN

R = FASE, PHASE, FASE, PHASE, FASE, FASE

COMP = COMPRESSORE, COMPRESSOR, COMPRESSEUR, KOMPRESSOR, COMPRESOR, KOMPRESSOR

FAN = VENTILATORE CONDENSATORE, FAN CONDENSER, VENTILATEUR CONDENSATEUR, KONDENSATORVENTILATOR, VENTILADOR CONDENSADOR, CONDENSATOR VENTILATIE

HP1 = PRESSOSTATO ALTA PRESSIONE, SWITCH HIGH PRESSURE, PRESSOSTAT HAUTE PRESSION, EITSKONTROLLEINRICHTUNG FÜR HOCHDRUCK, PRESOSTATO DE ALTA PRESION, VEILIGHEIDSDRUKMETER HOGE DRUK

HP2 = PRESSOSTATO VENTILATORE CONDENSATORE, SWITCH CONDENSER FAN, PRESSOSTAT VENTILATEUR CONDENSATEUR, EITSKONTROLLEINRICHTUNG KONDENSATORVENTILATOR, PRESOSTATO VENTILADOR CONDENSADOR, VEILIGHEIDSDRUKMETER CONDENSATOR VENTILATIE

M1 = COMPRESSORE, COMPRESSOR, COMPRESSEUR, KOMPRESSOR, COMPRESOR, KOMPRESSOR

M2 = VENTILATORE CONDENSATORE., FAN CONDENSER, VENTILATEUR CONDENSATEUR, KONDENSATORVENTILATOR, VENTILADOR CONDENSADOR, CONDENSATOR VENTILATIE

3A = MORSETTIERA, TERMINAL BOARD, TABLE DE BORNES, KLEMMTASTEN, CAJA DE TERMINALES, EINDBORD

KM1 = CONTATTORE, CONTACTOR, CONTACTEUR, ZÄHLER, CONTADOR, TELLER

69A = MORSETTO DI TERRA, GROUNDING TERMINAL, BORNE MISE À LA TERRE, ERDMASSE, CAJA DE TERMINALE DE PISO, AARDKLEM

SP1 = PRESSOSTATO ALTA PRESSIONE, HIGHT-PRESSURE SAFETY PRESSURE SWITCH, PRESSOSTAT DE SECURITE' HAUTE PRESSION, SICHERHEITSKONTROLLEINRICHTUNG FÜR HOCHDRUCK, PRESOSTATO DE SEGURIDAD DE ALTA PRESIÓN, VEILIGHEIDSDRUKMETER HOGE DRUK

SP2 = PRESSOSTATO CONDENSAZIONE, PRESSURE SWITCH CONDENSATION, PRESSOSTAT DE CONDENSATION, SICHERHEITSKONTROLLEINRICHTUNG KONDENSATOR, PRESOSTATO CONDENSADOR, VEILIGHEIDSDRUKMETER CONDENSATOR

Cod. 3221030